

# Index by Model Number

Toggle

Rockers

Pushbuttons

Illuminated PB

Keylocks

Rotaries

Slides

Tactiles

Tilt

Touch

Indicators

Accessories

Supplement

Z

MODEL	PAGE NO.	MODEL	PAGE NO.	MODEL	PAGE NO.	MODEL	PAGE NO.
A01	M3-4	A29K1	B4-11	CWSB21(Illum)	B18-21	G12 (Illum)	A38-41
A11	A4-11	A2SK1	B4-11			G13 (Illum)	A38-41
A12	A4-11	AB11	C6-11	CWSC11(Illum)	B22-27	G12K	B28-31
A13	A4-11	AB15	C6-11	CWSC21(Illum)	B22-27	G13K	B28-31
A15	A4-11			CWT12	B12-17	G15K	B28-31
A1R	A4-11	AB25	C6-11			G18K	B28-31
A18	A4-11			D22012	A24-33	G19K	B28-31
A19	A4-11	AS11	H4-9	D22013	A24-33	G22K	B28-31
A1S	A4-11	AS12	H4-9	D22015	A24-33	G23K	B28-31
		AS13	H4-9	D22018	A24-33	G25K	B28-31
A12K	B4-11			D22019	A24-33	G28K	B28-31
A13K	B4-11	AS22	H4-9			G29K	B28-31
A15K	B4-11	AS23	H4-9	D22022	A24-33	GB15	C44-47
A1RK	B4-11	AS24	H4-9	D22023	A24-33	GB25	C44-47
A18K	B4-11			D22025	A24-33		
A19K	B4-11	AT016-9704	Y1-34	D22028	A24-33	GB15 (Illum)	D8-11
A1SK	B4-11			D22029	A24-33		
A12K1	B4-11	B12	A12-19	D22042	A24-33	GB215	C48-51
A13K1	B4-11	B13	A12-19			G3B15	C52-57
A15K1	B4-11	B15	A12-19	DB2511	C18-23	G3B25	C52-57
A1RK1	B4-11	B1S	A12-19	DB2521	C18-23		
A18K1	B4-11	B18	A12-19	DSA01	K3-10	G3T12	A42-47
A19K1	B4-11	B19	A12-19			G3T13	A42-47
A1SK1	B4-11			DSBA1P	K3-10	G3T15	A42-47
A22	A4-11	B22	A12-19	DSBA1H	K3-10	G3T18	A42-47
A23	A4-11	B23	A12-19			G3T19	A42-47
A24	A4-11	B25	A12-19	EB2011	C24-37	G3T22	A42-47
A25	A4-11	B2R	A12-19	EB2061	C24-37	G3T23	A42-47
A2R	A4-11	B28	A12-19	EB2065	C24-37	G3T25	A42-47
A26	A4-11	B29	A12-19	EB2085	C24-37	G3T28	A42-47
A27	A4-11	B2S	A12-19			G3T29	A42-47
A28	A4-11	B12 (Illum)	A20-23	FB15AN	C38-41		
A29	A4-11	B13 (Illum)	A20-23			FM	L14
A2S	A4-11					FP01	D4-7
A22K	B4-11	BB15	C12-17	FR01	G4-11	GW12 (Illum)	B36-39
A23K	B4-11	BB16	C12-17	FR02	G12-15		
A24K	B4-11	BB25	C12-17	FS22	H14-17	HB01	M6-7
A25K	B4-11	BB26	C12-17			HB02	M6-7
A2RK	B4-11	CB15	J4-7	FT	L3	HB15	D12-17
A26K	B4-11	CB315	J8-11	G01	M5	HB16	D12-17
A27K	B4-11					HB215	D18-21
A28K	B4-11	CKL12	F3-8	G12	A34-37	HP0215	J12-15
A29K	B4-11	CKL13	F3-8	G13	A34-37	HP0315	J16-19
A2SK	B4-11			G15	A34-37		
A22K1	B4-11	CKM12	F3-8	G18	A34-37	HS13-X	G46-47, 50
A23K1	B4-11	CKM13	F3-8	G19	A34-37	HS13-Y	G46-47, 50
A24K1	B4-11			G22	A34-37	HS13-Z	G46-47, 50
A25K1	B4-11	CS12	H10-13	G23	A34-37		
A2RK1	B4-11	CS22	H10-13	G25	A34-37		
A26K1	B4-11			G28	A34-37		
A27K1	B4-11	CWSA11	B12-17	G29	A34-37		
A28K1	B4-11	CWSA12	B12-17				
		CWSB11	B12-17				
		CWSB21	B12-17				

# Index by Model Number

MODEL	PAGE NO.	MODEL	PAGE NO.	MODEL	PAGE NO.	MODEL	PAGE NO.
HS16-1	G46-47, 50	JWL22	B40-49	M2022	A48-79	M2112J, P	B92-97
HS16-2	G46-47, 50			M2023	A48-79	M2113N, R	B92-97
HS16-3	G46-47, 50	JWM21	B40-49	M2024	A52-79	M2113J, P	B92-97
HS16-4	G46-47, 50	JWM22	B40-49	M2025	A52-79	M2122N, R	B92-97
HS16-5	G46-47, 50	JWLW21	B40-49	M2026	A52-79	M2122J, P	B92-97
HS16-6	G46-47, 50	JWLW22	B40-49	M2027	A52-79	M2123N, R	B92-97
		JWMW21	B40-49	M2028	A48-79	M2123J, P	B92-97
ISO1BBF	E39-40	JWMW22	B40-49	M2029	A52-79		
ISO1EBF	E26-27					M2B15	C64-71
IS15BAF	E35-38	JWS11	B50-55	M2032	A52-79	M2B25	C64-71
IS15BBF	E35-38	JWS21	B50-55	M2033	A52-79		
IS15BSA	E41-47			M2035	A52-79	M2T12	A82-89
IS15BSB	E41-47	KB01	M9-13	M2038	A52-79	M2T13	A82-89
IS15EBF	E22-25	KB02	M9-13	M2039	A52-79	M2T15	A82-89
IS15ESB	E28-33	KB03	M9-13			M2T18	A82-89
IS18WW	E15-20	KB04	M9-13	M2042	A52-79	M2T19	A82-89
ISC01P	E11-14	KB05	M9-13	M2043	A52-79		
ISC15AN	E8-14	KB06	M9-13	M2044	A52-79	M2T22	A82-89
ISF15AC	E4-7			M2045	A52-79	M2T23	A82-89
		KB15	D22-35	M2046	A52-79	M2T25	A82-89
JB15FH	J20-27	KB16	D22-35	M2047	A52-79	M2T28	A82-89
JB15FP	J20-27	KB25	D22-35	M2048	A52-79	M2T29	A82-89
JB15HAP	J20-27	KB26	D22-35	M2049	A52-79		
JB15KH	J20-27					M2T12TX	B98-105
JB15KP	J20-27	KP0115	D36-47	M2012T	B62-91	M2T13TX	B98-105
		KP0215	D36-47	M2013T	B62-91	M2T15TX	B98-105
JB15LP (Illum)	J28-33			M2015T	B62-91	M2T18TX	B98-105
JB15HBP (Illum)	J28-33	LB01	M14-18	M2018T	B62-91	M2T19TX	B98-105
		LB02	M14-18	M2019T	B62-91		
JF01	M8	LB03	M14-18			M2T22TX	B98-105
				M2022T	B62-91	M2T23TX	B98-105
JF15C	J34-39	LB15	D48-58	M2023T	B62-91	M2T25TX	B98-105
JF15S	J34-39	LB16	D48-58	M2024T	B62-91	M2T28TX	B98-105
		LB25	D48-58	M2025T	B62-91	M2T29TX	B98-105
JF15R (Illum)	J40-45	LB26	D48-58	M2026T	B62-91		
JF15A (Illum)	J40-45			M2027T	B62-91	MB2011	C72-95
		LB15W	D59-67	M2028T	B62-91	MB2061	C72-95
JL15	J46-50	LB16W	C59-67	M2029T	B62-91	MB2065	C72-95
		LB25W	C59-67			MB2085	C72-95
JPL16	C58-63	LB26W	C59-67	M2032T	B62-91	MB2181	C72-95
JPL26	C58-63			M2033T	B62-91	MB2185	C72-95
JPM16	C58-63	LP0115	D68-73	M2035T	B62-91		
JPM26	C58-63	LP0125	D68-73	M2038T	B62-91	MB2411	C96-115
				M2039T	B62-91	MB2461	C96-115
JS01	H18-23	LW3021A	B61			MB2511	C116-127
JS03	H18-23			M2042T	B62-91	MB2521	C126-127
		LW3122	B56-60	M2043T	B62-91		
JS02	H24-29	LW3123	B56-60	M2044T	B62-91	MLW3012	B106-113
JS04	H24-29	LW3125	B56-60	M2045T	B62-91	MLW3013	B106-113
		LW3128	B46-60	M2046T	B62-91	MLW3015	B106-113
JWL11	B40-49	LW3129	B56-60	M2047T	B62-91	MLW3018	B106-113
JWL12	B40-49			M2048T	B62-91	MLW3019	B106-113
JWM11	B40-49	M2011	A52-79	M2049T	B62-91		
JWM12	B40-49	M2012	A48-79			MLW3022	B106-113
JWLW11	B40-49	M2013	A48-79	M2112L, T	A76-81	MLW3023	B106-113
JWLW12	B40-49	M2015	A52-79	M2113L, T	A76-81	MLW3025	B106-113
JWMW11	B40-49	M2018	A48-79	M2122L, T	A76-81	MLW3028	B106-113
JWMW12	B40-49	M2019	A52-79	M2123L, T	A76-81	MLW3029	B106-113
JWL21	B40-49	M2021	A52-79				
				M2112N, R	B92-97		

Toggles

Rockers

Pushbuttons

Illuminated PB

Programmable

Keylocks

Rotaries

Slides

Tactiles

Tilt

Touch

Indicators

Accessories

Z  
Supplement

# Index by Model Number

Toggle

Rockers

Pushbuttons

Illuminated PB

Programmable

Keylocks

Rotaries

Slides

Tactiles

Tilt

Touch

Indicators

Accessories

Supplement

MODEL	PAGE NO.	MODEL	PAGE NO.	MODEL	PAGE NO.	MODEL	PAGE NO.
MRA112	G16-21	P01	M19-20	S8AW	A100	S302	A103
MRA206	G16-21			S9AW	A100	S302T	A105
MRA403	G16-21	P2011	A90-93			S303	A103
		P2012	A90-93	S21A	A98	S303T	A105
MRB	G28-33	P2013	A90-93	S21AL	A101		
		P2021	A90-93	S21AW	A100	S305	A103
MRF112	G16-21			S21F	A99	S305T	A105
MRF206	G16-21	P2022	A90-93				
MRF403	G16-21	P2023	A90-93	S25AW	A100	S308	A103
				S28AW	A100	S308T	A105
MRK112	G16-21	P2011N	B114-119	S29AW	A100		
MRK206	G16-21	P2012N	B114-119			S309	A103
MRK403	G16-21	P2013N	B114-119	S31	A108	S309T	A105
		P2021N	B114-119	S31F	A110		
MRT22	G22-27	P2022N	B114-119	S31T	A109	S331	A103
MRT23	G22-27	P2023N	B114-119			S331F	A106
				S32	A108	S331R	A104
MRX108	G22-27	P2011Y	B114-119	S32F	A110	S331T	A105
MRX204	G22-27	P2012Y	B114-119	S32T	A109		
MRX402	G22-27	P2013Y	B114-119			S332	A103
		P2021Y	B114-119	S33	A108	S332F	A106
MRY106	G22-27	P2022Y	B114-119	S33F	A110	S332R	A104
		P2023Y	B114-119	S33T	A109	S332T	A105
MS12	H30-37			S35	A108	S333	A103
MS13	H30-37	PS1	G46, 49, 50	S38	A108	S333F	A106
MS20	H30-37	PS2	G46, 49, 50	S39	A108	S333R	A104
MS22	H30-37	PS3	G46, 49, 50			S333T	A105
MS23	H30-37	PS4	G46, 49, 50				
		PS5	G46, 49, 50	S41	A108		
MS12 (Illum)	H38-41			S41F	A110	S335	A103
MS13 (Illum)	H38-41	S1A	A98	S41R	A108	S335F	A106
		S1AL	A101	S41T	A109	S335T	A105
NDFC10	G34-37	S1AW	A100				
NDFC16	G34-37	S1F	A99	S42	A108	S338	A103
NDFR10	G34-37			S42F	A110	S338R	A104
NDFR16	G34-37	S2A	A98	S42R	A108	S338T	A105
		S2AL	A101	S42T	A109		
NDKC10	G34-37	S2AW	A100			S339	A103
NDKC16	G34-37	S2F	A99	S43	A108	S339R	A104
NDKR10	G34-37			S43F	A110	S339T	A105
NDKR16	G34-37	S3A	A98	S43R	A108		
		S3AL	A101	S43T	A109	S421	A111
ND3FC10	G38-45	S3AW	A100			S421T	A111
ND3FC16	G38-45	S3F	A99	S45	A108	S422	A111
ND3FR10	G38-45					S422T	A111
ND3FR16	G38-45	S5AW	A100	S48	A108	S423	A111
				S48R	A108	S423T	A111
ND3KC10	G38-45	S6A	A98				
ND3KC16	G38-45	S6AL	A101	S49	A108	S425	A111
ND3KR10	G38-45	S6AW	A100	S49R	A108	S425T	A111
ND3KR16	G38-45	S6F	A99			S428	A111
				S114	A96	S428T	A111
NP0115A	D74-79	S7A	A98	S116	A96	S429	A111
NP0115H	D74-79	S7AL	A101	S116R	A96	S429T	A111
		S7AW	A100				
		S7F	A99	S301	A103		
				S301F	A106		
				S301T	A105		

# Index by Model Number

MODEL	PAGE NO.	MODEL	PAGE NO.	MODEL	PAGE NO.
S732	A116	SM03	H42-43	UB215	D92-103
S821	A114			UB216	D92-103
S821D	A115	SS12	H44-48	UB225	D92-103
S822	A114	SS14	H44-48	UB226	D92-103
S822D	A115	SS22	H44-48		
S823	A114			WB12	C134-138
S823D	A115	SS12 (Illum)	H49-52	WB15	C134-138
		SS22 (Illum)	H49-52		
S831	A114			WR11	B124-130
S831D	A115	SS312	H53-58	WR12	B124-130
S832	A114	SS314	H53-58	WR13	B124-130
S832D	A115			WR15	B124-130
S833	A114	SW3001A	B120-121	WR18	B124-130
S833D	A115	SW3002A	B120-121	WR19	B124-130
		SW3003A	B120-121		
SB25	C129	SW3006A	B120-121	WT11	A124-130
		SW3007A	B120-121	WT12	A124-130
SB61	C129	SW3008A	B120-121	WT13	A124-130
SB63	C129			WT15	A124-130
		SW3821	B122-123	WT18	A124-130
SB221	C128	SW3821D	B122-123	WT19	A124-130
SB265	C130	SW3822	B122-123		
		SW3822D	B122-123	WT21	A124-130
SB4011NC	C38-43	SW3823	B122-123	WT22	A124-130
SB4011NO	C38-43	SW3823D	B122-123	WT23	A124-130
				WT25	A124-130
SCB15	C131-133	SW3831	B122-123	WT28	A124-130
SCB16	C131-133	SW3831D	B122-123	WT29	A124-130
SCB25	C131-133	SW3832	B122-123		
SCB26	C131-133	SW3832D	B122-123	YB01	M27-34
		SW3833	B122-123	YB02	M27-34
SK12AA	F9-14	SW3833D	B122-123	YB03	M27-34
SK12AD	F9-14			YB04	M27-34
SK12BA	F9-14	TL22	A118-123	YB05	M27-34
SK12BD	F9-14			YB06	M27-34
SK13DA	F9-14	TS1	G46, 48, 50		
SK13EA	F9-14	TS2	G46, 48, 50	YB15	D104-117
SK13ED	F9-14	TS3	G46, 48, 50	YB16	D104-117
		TS4	G46, 48, 50	YB25	D104-117
SK13AE	F15-18	TS5	G46, 48, 50	YB26	D104-117
SK15AE	F15-18				
		UB01K	M21-23	YB215	D118-129
SK12AG	F19-24	UB03K	M21-23	YB216	D118-129
SK12BG	F19-24	UB04K	M21-23	YB225	D118-129
SK14DG	F19-24	UB06K	M21-23	YB226	D118-129
SK14EG	F19-24	UB06BK	M21-23		
SK15BG	F19-24				
		UB15	D80-91		
SK22AG	F19-24	UB16	D80-91		
SK22BG	F19-24	UB25	D80-91		
SK24DG	F19-24	UB26	D80-91		
SK24EG	F19-24				
SK25BG	F19-24	UB201K	M24-26		
		UB204K	M24-26		
SK14DGM	F25-26				

Toggles

Rockers

Pushbuttons

Illuminated PB

Programmable

Keylocks

Rotaries

Slides

Tactiles

Tilt

Touch

Indicators

Accessories

**Z**  
Supplement